LOADING AND BRACING (TL & LTL) IN CLOSED OR OPEN TOP VAN TRAILERS OF COMPLETE ROUNDS PACKED IN CYLINDRICAL METAL CONTAINERS

PA 98 SERIES CONTAINER

INDEX

TITEM	PAGE (S)
GENERAL NOTES AND MATERIAL SPECIFICATIONS	3 - 4-7 - 8-11 - 12 - 13
PROCEDURES FOR CONVENTIONAL VAN TRAILERS EQUIPPED WITH ROLL-UP TYPE DOORS	20-21
WITH LARGE-ANGLED FRONT CORNERS	- 22

	REVIS	SIONS	BAK	sd PE	/WKF	
	1		CONFICHEN	WY	Essat	
	K_		COMPAND		MENT, MUNITIONS	
	/	·	Benericy of Headen			
	 V_{-}		MATERIEL	PMMAND (AMC)	MMAHDING GENERAL,	
l	/		Ullian H Esnat			
			U.S.	ARMY	AMC D	RAWING
	/		MARCH 1988			
			CLASS	DIVISION	DRAWING	FILE
			19	48	4213/5	II PM 1003

O NOT SCALE

GENERAL NOTES

- A. THIS DOCUMENT HAS BEEN PREPARED AND ISSUED IN ACCORDANCE WITH AR 740-1, AND AUGMENTS TM 743-200-1 (CHAPTER 5).
- B. THE OUTLOADING PROCEDURES SPECIFIED IN THIS DRAWING ARE APPLICABLE FOR THE PA98 SERIES COMPLETE ROUND CONTAINER ASSEMBLED ON THE 40" X 48" 4-WAY ENTRY PALLET. SEE THE PICTORIAL VIEW ON PAGE 3 FOR SIZE AND WEIGHT, REFER TO U.S. ARMY AMC (DARCOM) DRAWING 19-48-4079/5-20PM1002 FOR UNITIZATION PROCEDURES FOR THE PA 98 SERIES CON TAINERS.
- C. THE OUTLOADING PROCEDURES DEPICTED WITHIN THIS DOCUMENT ARE APPLICABLE FOR SHIPMENTS IN CONVENTIONAL TYPE VAN TRAILERS, AND FOR SHIPMENTS IN VAN TRAILERS EQUIPPED WITH VARIOUS TYPES OF SELF-CONTAINED MECHANICAL BRACING DEVICES (CROSS MEMBERS AND WALL MEMBERS) AND APPLY TO TRAILERS HAVING WOOD, OR WOOD AND METAL, OR ALL METAL FLOORS, VAN TRAILERS WHICH ARE 40'-0" LONG BY 7'-8-1/2" WIDE (INSIDE DIMENSION) HAVE BEEN SHOWN, HOWEVER, THE PROCEDURES ARE ALSO APPLICABLE FOR TRAILERS WHICH ARE EIGHTY-NINE INCHES (B9") THRU NINETY-NINE (99") IN WIDTH AND FOR TRAILERS OF OTHER LENGTHS FROM THE SHORTEST TO THE LONGEST AVAILABLE (REF; 24' TO 53'), AND FOR STRAIGHT TRUCK VANS, THE LOADING AND BRACING PROCEDURES SPECIFIED HEREIN ARE ALSO ADEQUATE (CONFIGURATION WISE AND STRENGTH WISE) FOR LOADS IN SHORTER OR LONGER VANS AND IN NARROWER OR WIDER VANS THAN SHOWN. THE SPECIFIED BRACING IS ADEQUATE FOR LOADS WEIGHING UP TO AND INCLUDING THE MAXIMUM WEIGHTS PERMITTED BY LAW.
- D. THE OUTLOADING PROCEDURES DEPICTED WITHIN THIS DOCUMENT FOR TRAILERS EQUIPPED WITH VARIOUS TYPES OF SELF-CONTAINED MECHANICAL BRACING DEVICES ARE LIMITED TO HIGHWAY MOVEMENTS ONLY. THE HEIGHT REQUIREMENTS SPECIFIED WITHIN THIS DRAWING FOR THE INSTALLATION OF CROSS MEMBERS ARE IDENTICAL WITH THOSE RECOMMENDED BY THE BUREAU OF EXPLOSIVES PAMPHLET &C, AND APPENDICES THERETO. CAUTION: TRAILERS EQUIPPED WITH WALL MEMBERS WHICH DO NOT MEET THE LOCATION REQUIREMENTS MUST NOT BE USED.
 - 1. PALLET UNITS SHOULD BE LOADED TIGHTLY AGAINST EACH OTHER AND/
 OR AGAINST INSTALLED CROSS MEMBERS. VOIDS LENGTHWISE WITHIN A
 LOAD SHOULD BE MINIMUM. CROSS MEMBERS MUST BE PLACED AGAINST
 THE LADING AS TIGHTLY AS THE WALL MEMBER LOCKING HOLE SPACING
 PERMITS. EACH CROSS MEMBER WILL BE INSTALLED WITH EACH END
 ATTACHED AS NEARLY AS POSSIBLE IN A "MATED" POSITION (AT EQUAL
 HEIGHTS, AND AT EQUAL DISTANCES FROM THE END OF THE TRAILER).
 - CROSS MEMBERS IN EMPTY TRAILERS AND THOSE UNUSED IN LOADED TRAILERS MUST BE "SECURED" FOR SHIPMENT, COMPONENTS ASSIGNED TO EACH TRAILER MUST REMAIN THEREWITH EVEN THOUGH UNUSED DURING SOME SHIPMENTS.
 - ONE (1) CROSS MEMBER WILL BE REQUIRED FOR EACH 10,000 POUNDS OF LADING AND SHOULD NOT BE RELIED UPON TO RETAIN GREATER WEIGHT. CROSS MEMBERS WILL NOT BE DOUBLED, THAT IS, TWO CROSS MEMBERS AT THE SAME HEIGHT LOCATION WILL NOT BE PLACED SIDE BY SIDE
- E. SELECTION OF A VEHICLE TO BE USED TO TRANSPORT THE DESIGNATED ITEM MUST COMPLY WITH AR 55-355, CHAPTER 29, FOR EXPLOSIVES AND OTHER DANGEROUS ARTICLES, IN FULL.
- F. THE GROSS WEIGHT AND AXLE DISTRIBUTION OF WEIGHT FOR A LOAD WILL

 BE THE RESPONSIBILITY OF THE CARRIER. THE CARRIER WILL ADVISE THE SHIPPER

 OF THE APPLICABLE LOADING REQUIREMENTS, AND THE SHIPPER WILL LOAD

 ACCORDINGLY. THE TOTAL WEIGHT OF THE LADING, OF THE DUNNAGE, OF

 THE TRACTOR AND OF THE SEMI-TRAILER CARRYING THE LADING, MUST NOT

 EXCEED THE MAXIMUM GROSS WEIGHT ALLOWED FOR THE STATE OR STATES

 THRU WHICH THE LOAD IS TO BE TRANSPORTED BY MOTOR CARRIER. LIKEWISE

 THE GROSS WEIGHT ON A SINGLE OR TANDEM AXLE MUST NOT EXCEED THE

 MAXIMUM ALLOWABLE WEIGHT. IF THERE IS ANY DOUBT AS TO WHETHER

 THE TOTAL GROSS WEIGHT OF AXLE WEIGHT EXCEEDS THE MAXIMUM ALLOWED,

 WEIGHT SHOULD BE VERIFIED BY ACTUALLY WEIGHTING THE LOADED VEHICLE.


(CONTINUED AT RIGHT)

MATERIAL SPECIFICATIONS

LUMBER:	FED SPEC MM-L-751, DUNNAGE LUMBER; SEE TM 743-200-1.
<u>NAILS</u> :	FED SPEC FF-N-105; COMMON.
STRAPPING, STEEL:	FED SPEC QQ-S-781; CLASS 1, TYPE \overline{I} OR \overline{IV} , HEAVY DUTY, FINISH A, B (GRADE 2), OR C.
	FED SPEC QQ-S-781; TYPE D, STYLE I, II OR IV, CLASS H, FINISH A, B (GRADE 2) OR C.
	GROUP B, CONSTRUCTION AND INDUSTRIAL PLYWOOD, INTERIOR WITH EXTERIOR GLUE, GRADE C-D, FED SPEC NN-P-530. IF SPECIFIED GRADE IS NOT AVAILABLE, A BETTER INTERIOR OR AN EXTERIOR GRADE MAY BE SUBSTITUTED.
<u>WIRE</u> :	FED SPEC QQ-W-461.
<u>TYGARD</u> :	POLYESTER YARN, 1,100 POUNDS/INCH OR WIDTH STRENGTH.
ADHESIVE:	TYGARD ADHESIVE.


(GENERAL NO TES CONTINUED)

- G. NOTICE: A SHIPMENT WILL BE POSITIONED IN THE TRAILER CONSISTENT WITH STATE WEIGHT LAWS. THE NUMBER OF LADING UNITS MAY BE ADJUSTED TO FIT THE SIZE OF THE TRAILER TO BE LOADED OR THE QUANTITY TO BE SHIPPED. COMBINATIONS OF THE OUTLOADING PROCEDURES SPECIFIED MAY BE USED. HOWEVER, THE APPROVED METHODS SHOWN MUST BE FOLLOWED AS CLOSELY AS POSSIBLE FOR BLOCKING, BRACING AND STAYING OF THE DESIGNATED ITEMS.
- H. THE "LOAD AS SHOWN" FOR MOST OF THE FULL LOADS DEPICTED HEREIN IS BASED ON AN APPROXIMATE LADING WEIGHT OF 42,000 POUNDS. THE SPECIFIED BLOCKING AND BRACING FOR THE FULL LOADS IS ADEQUATE FOR THE RETENTION OF HEAVIER LOADS, IF IT IS DESIRED TO INCREASE THE LADING WEIGHT.
- J. OTHER TYPES OF LADING ITEMS MAY BE LOADED INTO TRAILERS WHICH ARE PARTIALLY LOADED WITH PALLET UNITS OF COMPLETE ROUNDS, PROVIDING THE TOTAL LOAD IS COMPATIBLE, EXISTING DIRECTIVES ARE NOT VIOLATED, AND THE OTHER LADING ITEMS ARE BLOCKED AND BRACED TO EQUAL THE BLOCKING AND BRACING CRITERIA SPECIFIED HEREIN.
- K. SOME LOADS ARE SHOWN IN TRAILERS HAVING ROUNDED CORNERS AT THE FORWARD END. IF THE CONVENTIONAL VAN TRAILER BEING USED IS EQUIPPED WITH A SQUARE FRONT OR WITH AN INSTALLED BULKHEAD, OMIT THE FORWARD BLOCKING ASSEMBLY, PIECE MARKED (1), AND POSITION THE PALLET UNITS DIRECTLY AGAINST THE FORWARD PORTION OF THE TRAILER; OMIT CROSS MEMBERS IN THE FORWARD END OF MECHANICAL VAN TRAILERS HAVING A SQUARE FRONT.
- L. PALLET UNITS WHICH DO NOT CONTAIN A FULL QUANTITY OF ITEMS CAN BE TRANSPORTED. SEE THE "SHIPMENT OF A PARTIAL PALLET UNIT" DETAIL AND SPECIAL NOTES ON PAGE 13. FOR "SHIPMENT OF LEFTOVER CONTAINERS", SEE THE DETAILS AND SPECIAL NOTES ON PAGE 12.
- M. WHEN STEEL STRAPPING IS SEALED AT AN END-OVER-END LAP JOINT, A MINIMUM OF ONE (1) SEAL WITH TWO (2) PAIR OF NO TCHES WILL BE USED TO SEAL THE JOINT WHEN A NOTCH-TYPE SEALER IS BEING USED. A MINIMUM OF TWO (2) SEALS, BUTTED TOGETHER, WITH TWO (2) PAIR OF CRIMPS PER SEAL WILL BE USED TO SEAL THE JOINT WHEN A CRIMP-TYPE SEALER IS BEING USED. REFER TO THE "STRAP JOINT A" AND "STRAP JOINT B" DETAILS ON PAGE 3 FOR GUIDANCE.
- N. DUNNAGE LUMBER SPECIFIED THROUGHOUT THIS PROCEDURAL DRAWING IS OF NOMINAL SIZE. FOR EXAMPLE, 2" X 4" MATERIAL IS ACTUALLY 1-1/2" THICK BY 3-1/2" WIDE AND 2" X 6" MATERIAL IS ACTUALLY 1-1/2" THICK BY 5-1/2" WIDE.
- O. NOTICE: A STAGGERED NAILING PATTERN WILL BE USED WHEREVER POSSIBLE WHEN NAILS ARE DRIVEN INTO JOINTS OF DUNNA GE ASSEMBLIES. ALSO, A STAGGERED NAILING PATTERN WILL BE USED WHEN DUNNAGE IS NAILED TO THE FLOOR OF THE TRANSPORTING VEHICLE, OR WHEN LAMINATING DUNNAGE. THE NAILING PATTERN WILL BE ADJUSTED AS REQUIRED SO THAT A NAIL DOES NOT PENETRATE INTO OR NEAR A CRACK BETWEEN FLOOR BOARDS, ADDITIONALLY THE NAILING PATTERN FOR AN UPPER PIECE OF LAMINATED DUNNAGE WILL BE ADJUSTED AS REQUIRED SO THAT A NAIL FOR THAT PIECE WILL NOT BE DRIVEN THROUGH, ONTO, OR RIGHT BESIDE A NAIL IN A LOWER PIECE.
- P. POWER DRIVEN STAPLES MAY BE USED AS ALTERNATIVE FASTENERS FOR NAILS WHEN CONSTRUCTING DUNNAGE ASSEMBLIES WHICH ARE TO BE USED IN THE DELINEATED TRAILER LOADS SHOWN THROUGHOUT THIS DRAWING. THE STAPLES TO BE USED MUST BE EQUAL IN LENGTH TO THE SPECIFIED NAIL SIZE AND MUST BE SUBSTITUTED ON A CALE STAPLE FOR ONE NAIL BASIS. STAPLES WHICH ARE 2-1/2" OR LESS IN LENGTH SHOULD BE IN ACCORDANCE WITH FEDERAL SPECIFICATION FF-N-105 AS NEARLY AS PRACTICABLE. STAPLES WHICH ARE LONGER THAN 2-1/2" WILL BE A COMMERCIAL GRADE, OF A QUALITY EQUIVALENT TO THOSE MANUFACTURED BY SENCO PRODUCTS INCORPORATED. NOTE: STAPLES WILL NOT BE SUBSTITUTED FOR NAILS IN ANY LOAD RESTRAINING FLOOR DUNNAGE APPLICATION.
- PORTIONS OF THE TRAILERS, SUCH AS SIDEWALLS, END WALLS, AND ROOFS, HAVE NOT BEEN SHOWN IN THE LOAD VIEWS FOR CLARITY PURPOSES.
- FOR ADDITIONAL GUIDANCE, ATTENTION IS DIRECTED TO THE "SPECIAL NOTES" SECTIONS WHICH ARE IMMEDIATELY ADJACENT TO THE DEPICTED OUTLOADING METHODS.
- S. CONVERSION TO METRIC EQUIVALENTS: DIMENSIONS WITHIN THIS DOCUMENT ARE EXPRESSED IN INCHES, AND WEIGHTS ARE EXPRESSED IN POUNDS. WHEN NECESSARY, THE METRIC EQUIVALENTS MAY BE COMPUTED ON THE BASIS OF ONE INCH EQUALS 25.4 MM AND ONE POUND EQUALS 0.454 KG.

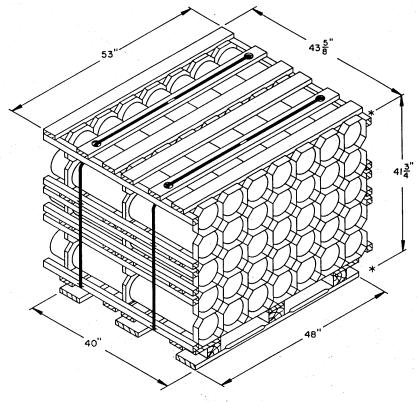

PALLET UNIT

CONTAINER	35 EACH @ 75 LBS (APPROX)
CUBE	55.9 CUBIC FEET (APPROX)
GROSS WEIGHT	2,795 LBS (APPROX)

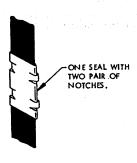

STRAP JOINT A


METHOD OF SECURING A STRAP JOINT WHEN USING A NOTCH-TYPE SEALER.




STRAP JOINT B

METHOD OF SECURING A STRAP JOINT WHEN USING A CRIMP-TYPE SEALER.

DETAILS

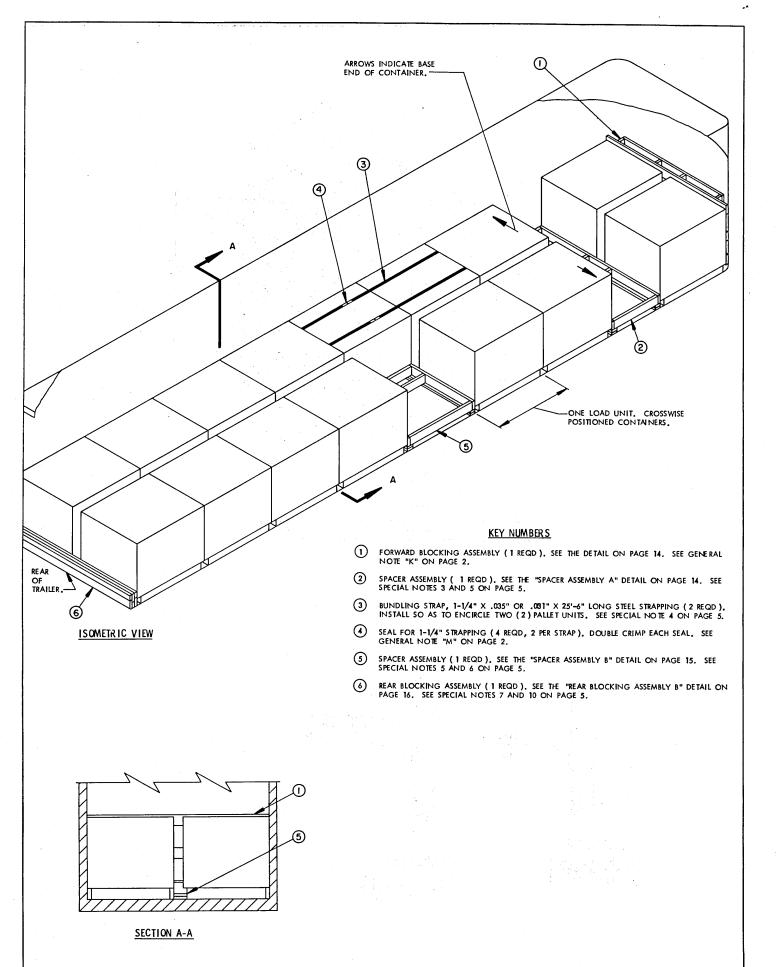

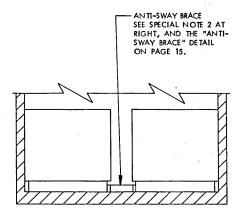


TYPICAL SECTION VIEW
(8'-2" WIDE CONVENTIONAL VAN TRAILER)

	BILL OF MATERIAL	
LUMBER	LINEAR FEET	BOARD FEET
2" X 4" 2" X 6"	67 127	45 127
NAILS	NO. REQD	POUNDS
104	164	2-1/2

- A 15-UNIT LOAD IS SHOWN IN A 40'-0" LONG BY 7'-8" WIDE (INSIDE DIMENSION) CONVENTIONAL TYPE VAN TRAILER, TRAILERS OF OTHER DIMENSIONS CAN BE USED.
- IF A TRAILER WHICH IS WIDER THAN 7'-9" IS FURNISHED FOR LOADING, ANTI-SWAY BRACES, SHOWN IN THE TYPICAL SECTION VIEW AT LEFT ARE TO BE POSITIONED BETWEEN ALL LATERALLY ADJACENT PALLET UNITS.
- 3. SPACER ASSEMBLY "A", SHOWN AS PIECE MARKED ② IN THE LOAD ON PAGE 4, IS USED FOR THE PURPOSE OF PROVIDING FOR PROPER WEIGHT DISTRIBUTION, AND IS SHOWN AS TYPICAL ONLY. IF THE TRAILER TO BE LOADED IS LONGER THAN 40', THE LOCATION OF THE ASSEMBLY, AND/OR THE STRUT IE NGTHS MAY BE DIFFERENT FROM WHAT IS SHOWN. IF A SHORTER TRAILER IS USED FOR THE DEPICTED LOAD, THIS ASSEMBLY MAY NOT BE REQUIRED. NOTE THAT A SPACER ASSEMBLY MUST NOT BE POSITIONED ADJACENT TO THE FORWARD BLOCKING ASSEMBLY, PIECE MARKED ①.
- 4. A PALLET UNIT THAT DOES NOT HAVE A PALLET UNIT DIRECTLY OPPOSITE
 MUST BE SECURED BY INSTALLING BUNDLING STRAPS, SHOWN AS PIECE MARKED

 ③ IN THE LOAD ON PAGE 4, AROUND THAT PALLET UNIT AND THE PALLET
 UNIT IMMEDIATELY ADJACENT.
- 5. NOTE: SPACER ASSEMBLIES, SHOWN AS PIECES MARKED ② AND ③ , MAY BE USED TO ADJUST THE LOAD QUANTITY , THE LOAD WEIGHT, AND/OR FOR PROPER WEIGHT DISTRIBUTION.
- 6. THE SPACER ASSEMBLY SHOWN AS PIECE MARKED ③ IN THE LOAD VIEW, IS ONLY SHOWN TO DEPICT A TYPICAL INSTALLATION. IF A PALLET UNIT IS LOADED IN PLACE OF THE SPACER ASSEMBLY, BUNDLING STRAPS, PIECES MARKED ③ , WILL NOT BE REQUIRED. NOTE THAT A SPACER ASSEMBLY MUST BE POSITIONED WHERE THERE WILL BE A PALLET UNIT AT EACH END; A SPACER ASSEMBLY MUST NOT BE POSITIONED ADJACENT TO THE FORWARD BLOCKING ASSEMBLY, PIECE MARKED ① .
- 7. IF THE VOID AT THE REAR OF THE LOAD BETWEEN THE PALLET UNITS AND THE REAR DOOR MEASURES 1-1/2" OR LESS, REAR BLOCKING IS NOT REQUIRED. IF THE VOID AT THE REAR OF THE LOAD IS GREATER THAN 1-1/2" BUT LESS THAN 9", USE "REAR BLOCKING ASSEMBLY B", PIECE MARKED (6), ON PAGE 4. IF THE VOID AT THE REAR OF THE LOAD IS 9" OR GREATER, USE "REAR BLOCKING ASSEMBLY A" AS DETAILED ON PAGE 16.
- 8. REFER TO PAGE 13 FOR GUIDANCE IN THE SHIPMENT OF PARTIAL PALLET UNITS.
- LEFTOVER CONTAINERS IN AN AMOUNT NOT TO EXCEED SIX (6) MAY BE SECURED TO THE TOP OF A FULL PALLET UNIT FOR SHIPMENT, REFER TO THE "PROCEDURES FOR SHIPMENT OF LEFTOVER CONTAINERS" ON PAGE 12 FOR GUIDANCE
- 10. TRAILERS EQUIPPED WITH ROLL-UP TYPE DOORS MAY BE USED; HOWEVER, SPECIAL REAR BLOCKING MUST BE INSTALLED. SEE THE "PROCEDURES FOR CONVENTIONAL VAN TRAILERS EQUIPPED WITH ROLL-UP TYPE DOORS" ON PAGES 20 AND 21 FOR GUIDANCE. THE NAILED-HEADER METHOD IS SHOWN ON PAGE 21. FOR THE DEPICTED LOAD IN A 40'-0" LONG TRAILER WHEN USING THE NAILED HEADER METHOD, IT MAY BE NECESSARY TO OMIT SPACER ASSEMBLY "A", SHOWN AS PIECE MARKED (2) OR TO DECREASE THE LENGTH OF THE STRUTS ON THE ASSEMBLY, TO ACCOMMODATE NAILING OF THE SPECIAL REAR BLOCKING, NOTE THAT THE SPECIAL REAR BLOCKING FOR TRAILERS EQUIPPED WITH HOLL-UP TYPE DOORS MAY ALSO BE USED IN TRAILERS EQUIPPED WITH HINGED DOORS.


LOAD AS SHOWN

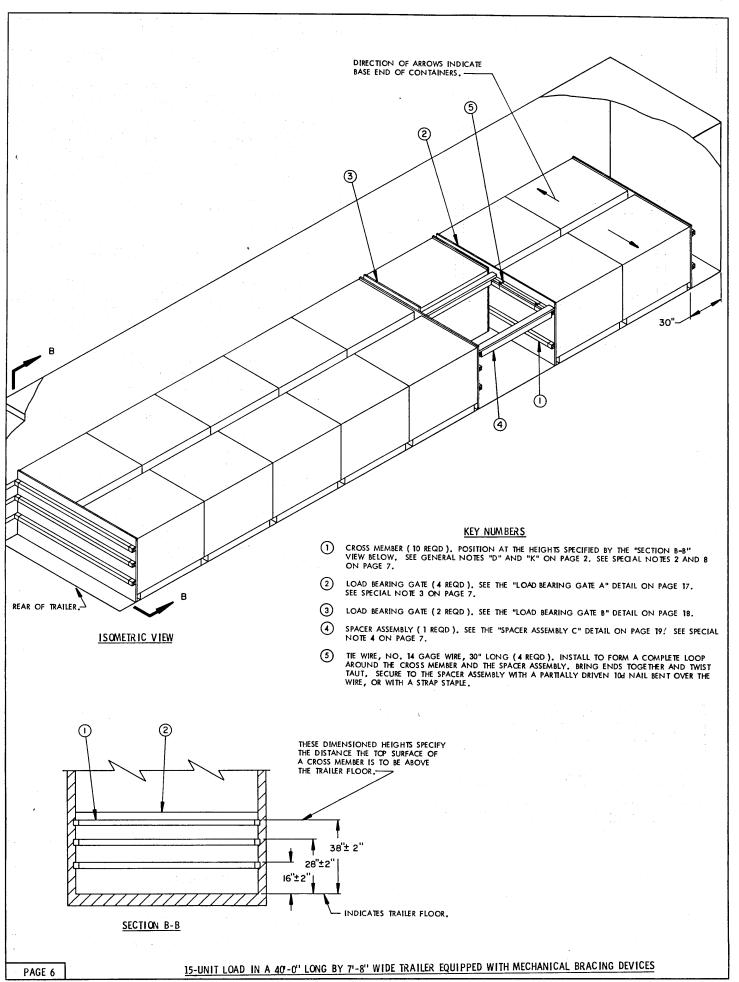

- A 15-UNIT LOAD IS SHOWN IN A 40'-0" LONG BY 7'-8" WIDE (INSIDE DIMENSION)
 TRAILER EQUIPPED WITH MECHANICAL BRACING DEVICES. TRAILERS OF OTHER
 DIMENSIONS CAN BE USED.
- 2. IF A TRAILER WHICH IS WIDER THAN 7'-9" IS FURNISHED FOR LOADING, ANTI-SWAY BRACES, SHOWN IN THE "TYPICAL SECTION VIEW" ON PAGE 5, ARE TO BE POSITIONED BETWEEN ALL LATERALLY ADJACENT PALLET UNITS. SEE THE ANTI-SWAY BRACE DETAIL ON PAGE 15. NOTE THAT IF ALTERNATIVE LOAD BEARING GATES ARE USED IN LEUJ-OF PLYWOOD GATES, STOP PIECES MUST BE APPLIED TO PEVENT LONGITUDINAL DISPLACEMENT OF ANTI-SWAY BRACES, IF USED, OR CROSS MEMBERS MUST BE INSTALLED AT THE 4" HEIGHT LOCATION TO PREVENT DISPLACEMENT.
- 3. IF PLYWOOD IS NOT AVAILABLE FOR THE CONSTRUCTION OF LOAD BEARING GATES, OR IF DESIRED, PIECES MARKED ② AND ③ MAY RE CONSTRUCTED FROM 1" LUMBER. SEE THE "ALTERNATIVE LOAD BEARING GATE A" DETAIL ON PAGE 17 AND THE "ALTERNATIVE LOAD BEARING GATE B" DETAIL ON PAGE 18.
- 4. THE SPACER ASSEMBLY, SHOWN AS PIECE MARKED (1) IN THE LOAD ON PAGE 6, IS SHOWN TO DEPICT A TYPICAL INSTALLATION. A PALLET UNIT MAY BE LOADED IN PLACE OF THE SPACER ASSEMBLY. WHEN USING A SPACER ASSEMBLY "C" PIECE MARKED (1), CROSS MEMBERS ARE REQUIRED AT BOTH ENDS OF THE SPACER ASSEMBLY AND THE ODD UNIT ADJACENT TO IT. NOTE THAT SPACER ASSEMBLIES, PIECES MARKED (2) AND (3) ON PAGE 4, AND/OR PIECES MARKED (4) ON PAGE 6 MAY BE USED TO ADJUST THE LOAD QUANTITY, THE LOAD WEIGHT AND/OR FOR WEIGHT DISTRIBUTION OF THE DEPICTED LOAD.
- 5. REFER TO PAGE 13 FOR GUIDANCE IN THE SHIPMENT OF PARTIAL PALLET UNITS.
- 6. LEFTOVER CONTAINERS IN AN AMOUNT NOT TO EXCEED SIX (6) MAY BE SECURED TO THE TOP OF A FULL PALLET UNIT FOR SHIPMENT. REFER TO THE "PROCEDURES FOR SHIPMENT OF LEFTOVER CONTAINERS" ON PAGE 12 FOR GUIDANCE.
- FOR SHIPMENT OF LESS THAN FULL LOADS, REFER TO THE APPLICABLE GUIDANCE ON PAGE 11.
- 8. IF THE TRAILER BEING LOADED IS EQUIPPED ONLY WITH SHORT WALL MEMBERS AT THE REAR FOR ATTACHMENT OF THE CROSS MEMBERS, THE CROSS MEMBERS AND THE LOAD BEARING GATE, PIECES MARKED ① AND ② AT THE FRONT OF THE LOAD WILL BE OMITTED; THEN A SPACER ASSEMBLY, PIECE MARKED ② ON PAGE 4 MAY BE REQUIRED TO PROVIDE FOR PROPER WEIGHT DISTRIBUTION.

	BILL OF MATERIAL	
LUMBER	LINEAR FEET	BOARD FEET
2" X 4"	27	18
NAILS	NO. REQD	POUNDS
10d	20	1/2
	133 SQ FT REQD	
CROSS MEMBER		10 REQD

LOAD AS SHOWN

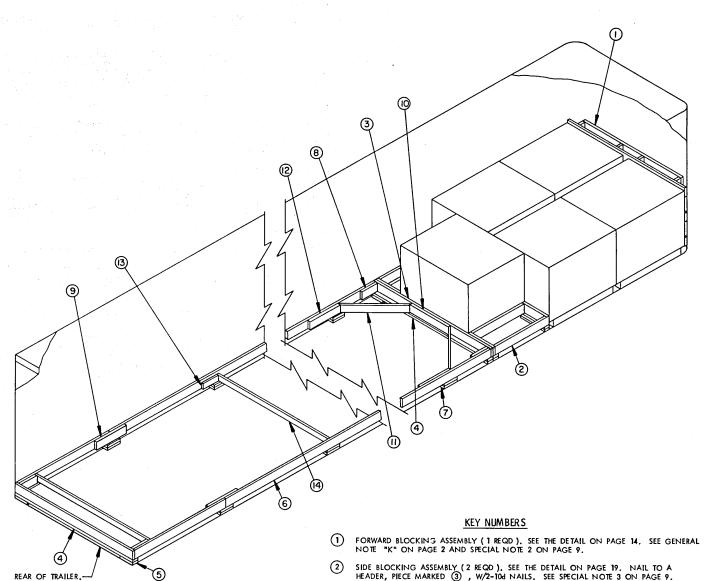

ISOMETRIC VIEW

(KEY NUMBERS CONTINUED)


- BACK-UP CLEAT, 2" X 6" X 24" (2 REQD). NAIL TO A SIDE STRUT (12) PIECE MARKED (6) , W/8-104 NAILS.
- STRUT BRACE RETAINING CLEAT, 2" X 4" X 12" (AS REQD). NAIL TO A SIDE STRUT, PIECE MARKED (6), W/3-10d NAILS. SEE SPECIAL NOTES 4 AND 5 ON PAGE 9.
- STRUT BRACE, 2" X 4" BY TRAILER WIDTH MINUS 3" IN LENGTH (MINIMUM OF ONE REQUIRED). NAIL TO THE POCKET CLEATS, PIECES MARKED (Q) AND/OR TO THE STRUT BRACE RETAINING CLEATS, PIECES MARKED (B), W/2-12d NAILS AT EACH END. SEE SPECIAL NOTE 5 ON PAGE 9.

- SIDE BLOCKING ASSEMBLY (2 REQD). SEE THE DETAIL ON PAGE 19. NAIL TO A HEADER, PIECE MARKED 3 , W/2-10d NAILS. SEE SPECIAL NOTE 3 ON PAGE 9.
- (3) HEADER, 2" X 6" BY TRAILER WIDTH MINUS 1/2" IN LENGTH (2 REQD). SEE SPECIAL NOTE 7 ON PAGE 9.
- 4 HEADER AND SIDE STRUT SUPPORT, 2" X 4" BY TRAILER WIDTH MINUS 1/2" IN LENGTH (2 REQD). NAIL TO THE BOTTOM EDGE OF A HEADER, PIECE MARKED 3 , W/1-10d NAIL EVERY 8".
- RISER PIECE, 2" \times 4" \times 9" (4 REQD). POSITION UNDER EACH END OF HEADER AND SIDE STRUT SUPPORT, PIECES MARKED (4) . NAIL TO PIECE MARKED (4) W/2-10d NAILS.
- SIDE STRUT, 2" X 6" BY CUT-TO-FIT BETWEEN THE FORWARD AND REAR HEADERS, PIECES MARKED 3, (2 REQD). SEE SPECIAL NOTE 4 ON PAGE 9.
- RISER PIECE, 2" X 4" X 9" (DOUBLED) (AS REQD), LAMINATE W/2-10d NAILS. CENTER UNDER THE JOINTS OF PIECES MARKED (1) AND (2), (3) AND (4) AND UNDER THE SPIECE OF PIECES MARKED (6) IF APPLICABLE. NAIL TO SIDE STRUT MARKED (6)
- POCKET CLEAT, 2" X 6" X 12" (4 REQD). NAIL TO A SIDE STRUT, PIECE MARKED (6), W/3-104 NAILS. TOENAIL TO THE ADJACENT HEADER, PIECE MARKED (3) W/3-124 NAILS.
- SPLICE PIECE, 2" X 6" X 24" (AS REQD), CENTER ON JOINT OF PIECES MARKED (6) AND NAIL TO SIDE STRUT MARKED (6) W/4-10d NAILS AT EACH END. SEE SPECIAL NOTE 4 ON PAGE 9. (9)
- (II) CENTER CLEAT, 2" X 6" X 30" (1 REQD). NAIL TO A HEADER, PIECE MARKED 3 W/6-10d NAILS.
- $^{\odot}$ DIAGONAL BRACE, 2" X 6" BY CUT-TO-FIT (2 REQD), DOUBLE BEVEL EACH END WITH 45 $^{\circ}$ CUTS. INSTALL AT A 45 $^{\circ}$ ANGLE AS SHOWN AND TOENAIL TO THE ADJACENT HEADER AND SIDE STRUT, PIECES MARKED 3 AND 6, W/2-16d NAILS AT EACH END.

(CONTINUED AT LEFT)

TYPICAL LTL (5-UNIT LOAD) IN A CONVENTIONAL VAN TRAILER

- THESE OUTLOADING PROCEDURES COVER THE USE OF BOTH "K-BRACE" AND NAILED FLOOR LINE BLOCKING IN A 7'-8" WIDE (INSIDE DIMENSION) VAN TRAILER WHICH IS EQUIPPED WITH OR WITHOUT NAILABLE FLOORS AND REAR CORNER POSTS. WIDER OR NARROWER TRAILERS MAY BE USED. SEE SPECIAL NOTES 7 AND 8.
- 2. IF THE TRAILER TO BE LOADED IS WIDER THAN 7'-9" ANTI-SWAY BRACES, DETAILED ON PAGE 15, WILL BE POSITIONED BETWEEN ALL LATERALLY ADJACENT PALLET UNITS.
- 3. THE SIDE BLOCKING ASSEMBLIES, PIECE MARKED ② , ARE SHOWN ONLY TO DEPICT A TYPICAL INSTALLATION. SIDE BLOCKING ASSEMBLIES WILL BE USED WHEN A PALLET UNIT IS OMITTED. THEY MAY OR MAY NOT BE REQUIRED, DEPENDING ON THE QUANTITY OF PALLET UNITS TO BE SHIPPED.
- 4. DEPENDING ON THE NUMBER OF UNITS BEING LOADED, EACH OF THE SIDE STRUTS, PIECES MARKED (a). MAY NEED TO BE FORMED FROM MORE THAN ONE PIECE OF MATERIAL, IF SUCH IS THE CASE, THE SIDE STRUTS MUST BE SPLICED. SPLICING CAN BE ACCOMPLISHED BY CENTERING A 2" X 6" X 24" PIECE ON THE JOINT OF THE SIDE STRUTS AND NAILING IT TO THE SIDE STRUTY W/4-JOI NAILS AT EACH END. CAUTION: A RISER PIECE, PIECE MARKED (7), MUST BE POSITIONED UNDER EACH SPLICE JOINT. NOTE: IF DESIRED, THE STRUT BRACING PIECE (S), PIECE MARKED (1), MAY BE NAILED TO THE SPLICE PIECES IN LEV OF USING ADDITIONAL STRUT BRACE RETAINING CLEATS, PIECES MARKED (3).
- 5. ALL LTL LOADS, REGARDLESS OF THEIR SIZE, REQUIRE ONE STRUT BRACE POSITIONED AT THE REAR OF THE TRAILER AND NAILED TO PIECE MARKED (B). IF THE SIDE STRUTS, PIECES MARKED (G), ARE LONGER THAN 7-0", AN ADDITIONAL STRUT BRACE, PIECE MARKED (G), AND TWO (2) STRUT BRACE RETAINING CLEATS, PIECES MARKED (G), AND TWO (2) RISER PIECES MARKED (T), MUST BE APPLIED FOR EVERY 7'-0" OF SIDE STRUT LENGTH.
- 7. TRAILERS EQUIPPED WITH ROLL-UP TYPE DOORS MAY BE USED. HOWEVER, SPECIAL REAR BLOCKING MUST BE INSTALLED IN LIEU OF THE "K-BRACE" TYPE BLOCKING. SEE THE "PROCEDURES FOR CONVENTIONAL VAN TRAILERS EQUIPPED WITH ROLL-UP TYPE DOORS" ON PAGES 20 AND 21.. A NAILED-HEADER METHOD AND TYGARD METHOD ARE SHOWN. NOTE THAT THE SPECIAL REAR BLOCKING FOR TRAILERS EQUIPPED WITH ROLL-UP TYPE DOORS MAY ALSO BE USED IN TRAILERS EQUIPPED WITH HINGED DOORS, AND MAY BE USED IN LIEU OF PIECES MARKED (3) THRU (4) WHICH APPLY TO TRAILERS HAVING NON-NAILABLE FLOORS.
- 8. IF DESIRED, IN TRAILERS EQUIPPED WITH NAILABLE FLOORS, THE NAILED-HEADER METHOD OF REAR BLOCKING MAY BE USED IN LEU OF THE K-BRACE BLOCKING SHOWN AS PIECES MARKED (3) THRU (1). REFER TO PAGE 20 FOR GUIDANCE. WHEN THE NAILED-HEADER METHOD OF BRACING IS APPLIED FOR THE BRACING OF THE DEPICTED 5-UNIT LOAD OR ANY ODD NUMBERED QUANTITY, OMIT THE REAR BLOCKING ASSEMBLY AND USE 2" X 6" HEADERS IN LIEU OF THE 2" X 4" HEADERS SHOWN IN THE "NAILED-HEADER METHOD" DETAIL ON PAGE 20. NOTE THAT THE HEADER WILL BE POSITIONED AGAINST THE PALLET AND THE SIDE BLOCKING SHOWN AS PIECE MARKED (2) WILL BE SHORTER THAN DEPICTED IN THE SIDE BLOCKING DETAIL. WHEN SHIPPING AN EVEN NUMBERED QUANTITY, THE NAILED-HEADER METHOD WILL APPLY AS IS, AS AN ALTERNATIVE IN NAILABLE FLOOR TRAILERS, OR IN TRAILERS HAVING NON-NAILABLE FLOORS, THE TYGARD METHOD DEPICTED ON PAGE 21 MAY BE USED.
- 9. REFER TO PAGE 13 FOR GUIDANCE IN THE SHIPMENT OF PARTIAL PALLET UNITS.
- 10. LEFTOVER CONTAINERS, IN AN AMOUNT NOT TO EXCEED SIX (6), MAY BE SECURED TO THE TOP OF A FULL PALLET UNIT FOR SHIPMENT. REFER TO THE "PROCEDURES FOR SHIPMENT OF LEFTOVER CONTAINERS" ON PAGE 12 FOR GUIDANCE.

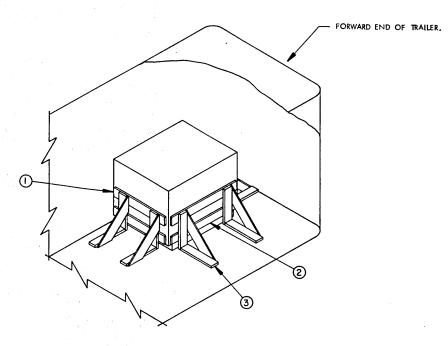


ISOMETRIC VIEW

SPECIAL NOTES:


- A 7'-8" WIDE (INSIDE DIMENSION) TRAILER WHICH HAS A NAILABLE FLOOR IS SHOWN. TRAILERS OF OTHER WIDTHS CAN BE USED.
- THE POSITIONING OF A SINGLE PALLET UNIT IS OPTIONAL. IF THE TRAILER HAS A SQUARE FRONT, THE TWO (2) FORWARD LTL BRACES MAY BE OMITTED AND THE UNIT POSITIONED AGAINST THE END WALL.
- 3. MORE THAN ONE PALLET UNIT CAN BE SHIPPED PROVIDING THE CAPACITY OF THE LTL BRACES IS NOT EXCEEDED. THE LOAD SHOULD BE FORMED IN ROWS, WITH THE UNITS POSITIONED AGAINST OPPOSITE SIDEWALLS, THE "ANTI-SWAY BRACE" DETAILED ON PAGE 15 MUST BE INSTALLED BETWEEN LATERALLY ADJACENT UNITS WHEN USING A 7'-9" TRAILER OR WIDER.
- 4. EACH LTL BRACE AS APPLIED FOR LONGITUDINAL BRACING WILL SUPPORT 2,000 POUNDS OF LADING. HOWEVER, NOT LESS THAN TWO (2) BRACES WILL BE USED AGAINST EACH PALLET UNIT ACROSS THE WIDTH OF THE TRAILER. ADDITIONAL BRACES MAY BE INSTALLED FOR THE RETENTION OF A HEAVIER LOAD.

KEY NUMBERS

- 1 LOAD BEARING PIECE, 1" X 6" X 42" (4 REQD), LOCATE AT THE HEIGHTS AS SPECIFIED IN THE "LTL BRACE" DETAIL BELOW. NAIL TO THE LTL BRACES W/4-6d NAILS AT EACH JOINT. SEE GENERAL NOTE "O" ON PAGE 2.
- 2 LOAD BEARING PIECE, 1" X 6" X 48" (2 REQD). LOCATE AT THE HEIGHTS AS SPECIFIED IN THE "LTL BRACE" DETAIL BELOW. NAIL TO THE LTL BRACES W/4-6d NAILS AT EACH JOINT.
- (3) LTL BRACE (6 REQD). SEE THE "LTL BRACE" DETAIL BELOW, NAIL TO THE TRAILER FLOOR W/7-104 NAILS. SEE SPECIAL NOTE 4.

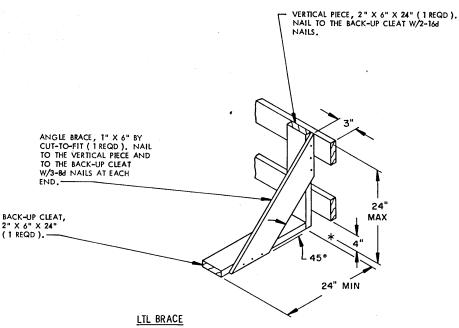

TYPICAL LTL (1-UNIT LOAD) IN A CONVENTIONAL VAN TRAILER

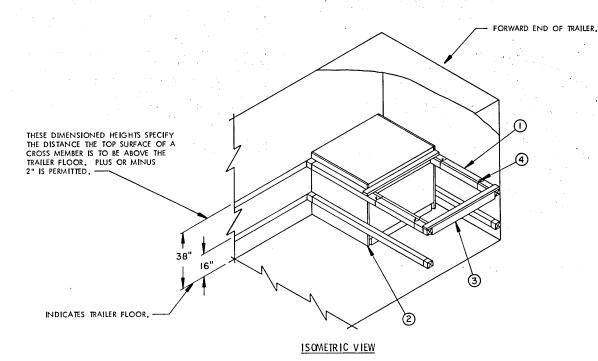


- A 7'-8" WIDE (INSIDE DIMENSION) VAN TRAILER EQUIPPED WITH MECHANICAL BRACING DEVICES IS SHOWN. TRAILERS OF OTHER WIDTHS MAY BE USED.
- 2. A TYPICAL LTL LOAD OF ONE (1) PALLETIZED UNIT IS SHOWN. IF TWO (2) PALLETIZED UNITS ARE TO BE TRANSPORTED, POSITION THE UNITS TWO ACROSS THE WIDTH OF THE TRAILER. OMIT THE SPACER ASSEMBLY AND THE TIE WIRES SHOWN AS PIECES MARKED (3) AND (4). NOTE: WHEN LOADING TWO (2) PALLETIZED UNITS ACROSS THE WIDTH OF THE TRAILER, POSITION THE UNITS AGAINST THE FORWARD END WALL (UNIESS THE TRAILER HAS ROUNDED CORNERS) AND OMIT THE TWO CROSS MEMBERS AT THE FORWARD END, POSITION ONE ANTI-SWAY BRACE SHOWN ON PAGE 15 IF USING A TRAILER 7'-9" WIDE OR WIDER. NOTE THAT WHEN USING AN ANTI-SWAY BRACE, CROSS MEMBERS MUST BE POSITIONED AT THE 4" HEIGHT LOCATION TO PREVENT DISPLACEMENT OF ANTI-SWAY BRACES.


KEY NUMBERS

and the second of the second of the second


- CROSS MEMBER (4 REQD), POSITION AT THE HEIGHTS AS SPECIFIED BY THE ISOMETRIC VIEW ABOVE. SEE GENERAL NOTES "D" AND "K" ON PAGE 2.
- 2 LOAD BEARING GATE (2 REQD), SEE THE LOAD BEARING GATE "B" DETAIL ON PAGE 18.
- 3 SPACER ASSEMBLY (2 REQD). SEE THE SPACER ASSEMBLY "C" DETAIL ON PAGE 19.
- TIE WIRE, NO. 14 GAGE WIRE 30" LONG (4 REQD). INSTALL TO FORM A COMPLETE LOOP AROUND THE CROSS MEMBER AND THE SPACER ASSEMBLY. BRING ENDS TOGETHER AND TWIST TAUT. SECURE TO THE SPACER ASSEMBLY WITH A PARTIALLY DRIVEN 10d NAIL BENT OVER THE WIRE, OR WITH A STRAP STAPLE.

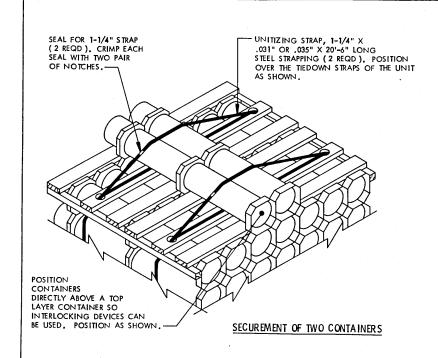

- 1. SHIPMENTS OF COMPLETE ROUNDS SHOULD CONSIST OF FULL-HEIGHT AND FULL LAYER UNITS TO THE MAXIMUM EXTENT POSSIBLE. HOWEVER, THE END OF A LOT, OR THE QUANTITY OF ITEMS NEEDED TO FILL A REQUISITION, MAY NECESSITATE THE SHIPMENT OF ONE OR MORE LEFTOVER CONTAINERS. LEFTOVER CONTRINERS ARE DESCRIBED AS A QUANTITY OF CONTAINERS WHICH IS INSUFFICIENT TO FORM A FULL-LAYERED PARTIAL UNIT FOR SECUREMENT ON TOP OF A FULL PALLET UNIT AS SHOWN ON PAGE 13.
- 2. SHIPMENT OF LEFTOVER CONTAINERS IS APPLICABLE FOR CONUS AND OCONUS MOTOR CARRIER SHIPMENTS FROM DEPOT TO DEPOT OR FROM DEPOT TO POSTS, CAMPS, AND STATIONS, OR UPON APPROVAL FROM HIGHER HEADQUARTERS, FOR SHIPMENTS FROM LOAD, ASSEMBLE, AND PACK (LAP) PLANTS TO DEPOTS. CAUTION: A LOAD CONTAINING LEFTOVER CONTAINERS IN AN AMOUNT WHICH IS LESS THAN A FULL LAYER, AND SECURED TO THE TOP OF A FULL OR PARTIAL UNIT, MUST NOT BE DESTINED FOR SHIPMENT OVERSEAS BY WATER CARRIER.
- 3. THE PROCEDURES ON THIS PAGE ARE APPLICABLE FOR THE SHIPMENT OF LEFTOVER CONTAINERS IN ANY OF THE LOADS DEPICTED HEREIN.

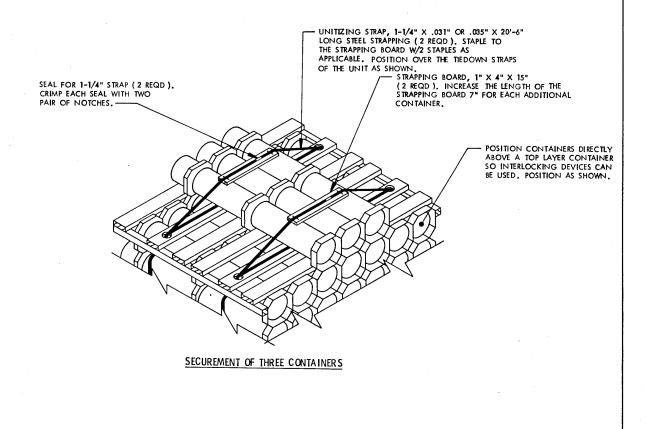


PROCEDURES FOR SHIPMENT OF LEFTOVER CONTAINERS

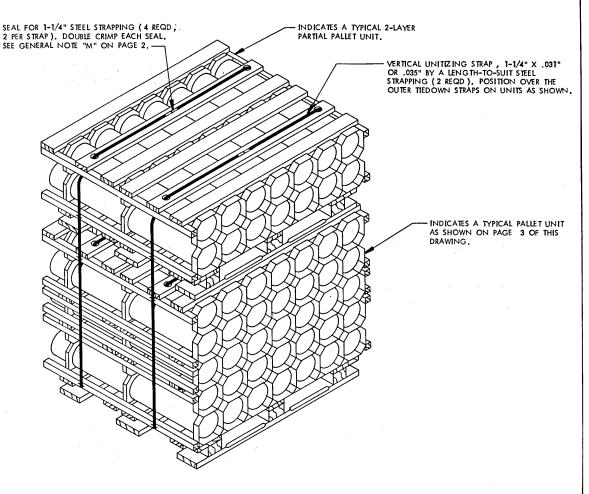

SECUREMENT OF A PARTIAL PALLET UNIT ON TOP OF A FULL PALLET UNIT


SPECIAL NOTES:


- 1. THE VIEW SHOWN ABOVE DEPICTS A PARTIAL 2-LAYER PALLET UNIT POSITIONED ON TOP OF A FULL-HEIGHT PALLET UNIT AND UNITIZED WITH TWO VERTICAL UNITIZING STRAPS. PLACEMENT WITHIN THE LOAD IS OPTIONAL, EXCEPT THAT IT WILL NOT BE POSITIONED ADJACENT TO SPACER ASSEMBLIES MARKED ② AND ③ IN THE LOAD ON PAGE 4, IN THE REAR LOAD UNIT, OR WITHIN A GROUP WHICH IS BUNDLED TOGETHER.
- 2. SHIPMENTS OF PALLET UNITS SHOULD CONSIST OF FULL-HEIGHT AND FULL-LAYER UNITS TO THE MAXIMUM EXTENT POSSIBLE. HOWEVER, THE END OF A LOT, OR THE QUANTITY OF ITEMS NEEDED TO FILL A REQUISITION MAY NECESSITATE THE SHIPMENT OF ONE OR MORE LESS-THAN-FULL PALLET UNITS WITHIN A LOAD. THE PROCEDURES ON THIS PAGE AND ON PAGE 12 ARE PRESENTED AS GUIDANCE IN THE SHIPMENT OF THESE PARTIAL UNITS.
- THE "SHIPMENT OF A PARTIAL PALLET UNIT" PROCEDURES ON THIS PAGE ARE APPLICABLE FOR LOADS IN CONVENTIONAL TYPE VAN TRAILERS AND IN TRAILERS EQUIPPED WITH MECHANICAL BRACING DEVICES.
- FOR SHIPMENT OF ONE THRU SIX "LEFTOVER" CONTAINERS, SEE THE PROCEDURES ON PAGE 12 OF THIS DRAWING.

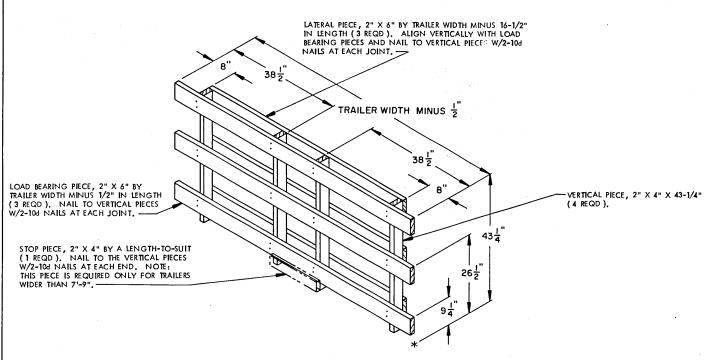

FORWARD BLOCKING ASSEMBLY


THIS ASSEMBLY IS DESIGNED FOR USE AT THE FRONT END OF A TRAILER HAVING ROUNDED CORNERS, AND IS APPLICABLE FOR A CORNER RADIUS OF NOT MORE THAN 6 1/2". IF THE RADIUS IS FROM 6 1/2" TO 8", 2" X 6" VERTICAL PIECES WILL BE USED IN LIEU OF THE 2" X 4" PIECES. IF THE TRAILER, TO BE LOADED HAS LARGE-ANGLED CORNERS AT THE FORWARD END, REFER TO PAGE 22 FOR GUIDANCE.

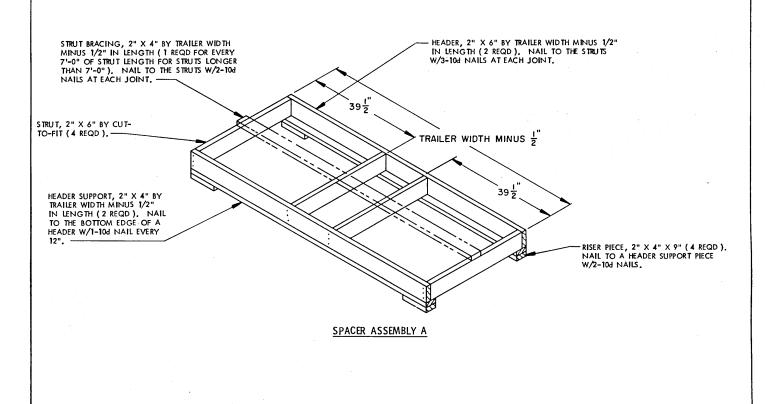

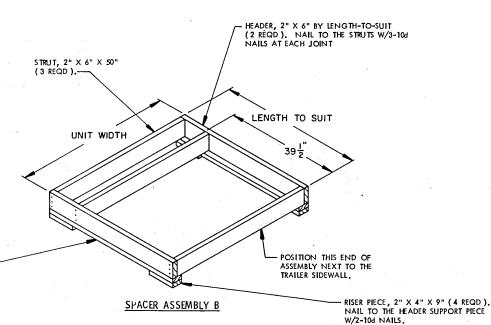


THIS ASSEMBLY IS DESIGNED FOR USE IN THE PLACE OF A PALLET UNIT WHICH IS OMITTED FROM THE LOAD IN A CONVENTIONAL VAN TRAILER, AS TYPICALLY SHOWN IN THE LOAD ON PAGE 4.

HEADER SUPPORT PIECE, 2" X 4"
BY LENGTH-TO-SUIT (2 REQD).
NAIL TO THE BOTTOM EDGE OF A
HEADER W/1-10d NAIL EVERY 12".—

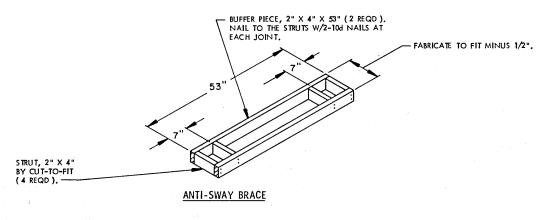


THIS ASSEMBLY IS DESIGNED FOR USE ON THE FLOOR BETWEEN LATERALLY ADJACENT PALLET UNITS. NOTE THAT AN ASSEMBLY NEED NOT BE CONSTRUCTED FOR A TIGHT FIT; UP TO ONE HALF INCH (1/2") SPACE IS PERMITTED.

DETAILS .

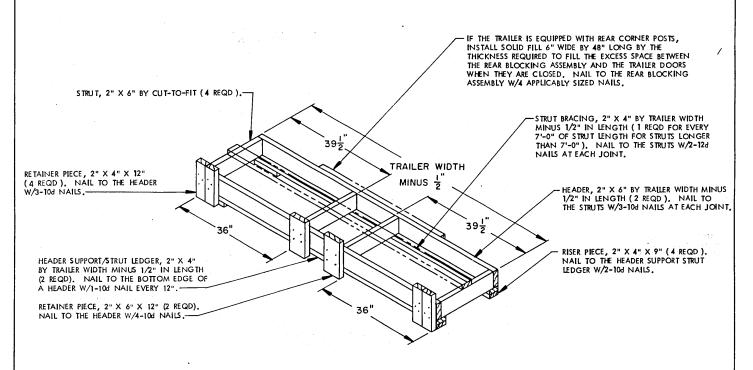

REAR BLOCKING ASSEMBLY A

THIS ASSEMBLY IS FOR USE AT THE REAR END OF CROSSWISE POSITIONED CONTAINERS WHEN THE SPACE BETWEEN THE LADING AND THE TRAILER DOORS IS GREATER THAN 9". NOTE THAT THE ABOVE VIEW IS ROTATED 180° FROM THE POSITION IN WHICH IT WILL BE INSTALLED.

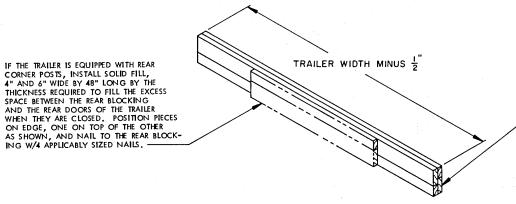



SOLID FILL, 4" AND 6" WIDE MATERIAL BY TRAILER WIDTH MINUS 1/2" IN LENGTH BY THE THICKNESS REQUIRED TO CONTACT REAR CORNER POSTS OR TO CONTACT REAR DOORS OF THE TRAILER WHEN THEY ARE CLOSED. POSITION PIECES ON EDGE, ONE ON TOP OF THE OTHER AS S.HOWN, AND LAMINATE W/1-10d NAIL EVERY 12".

REAR BLOCKING ASSEMBLY B

THIS REAR BLOCKING IS DESIGNED FOR USE AT THE REAR END OF A LOAD WHEN THE SPACE BETWEEN THE LADING AND THE TRAILER DOORS IS LESS THAN 9".


DETAILS

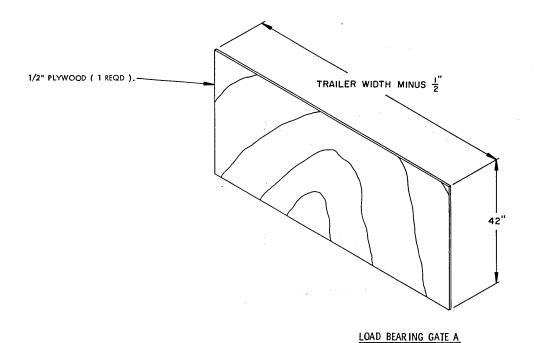

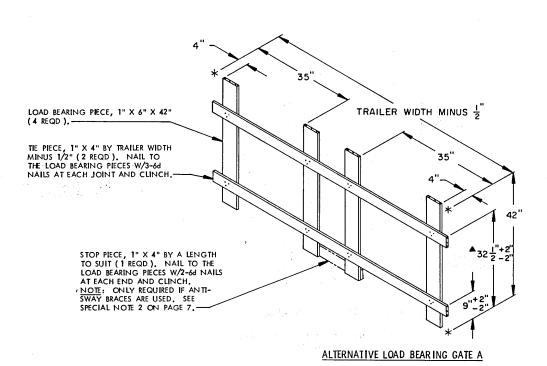


PAGE 17

▲ THIS HEIGHT MAY NEED TO BE ADJUSTED TO PROVIDE FOR CLEARANCE OF THE CROSS MEMBERS AT A MINUS TOLERANCE INSTALLATION.

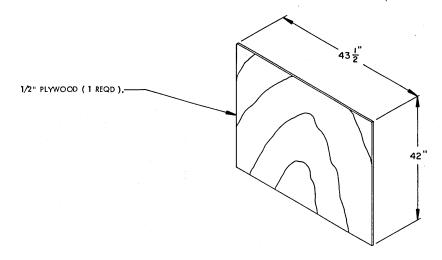


LOAD BEARING GATE B

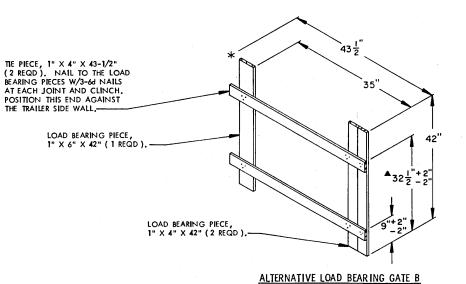


ATHIS HEIGHT MAY NEED TO BE
ADJUSTED TO PROVIDE FOR CLEARANCE
OF THE CROSS MEMBERS AT A MINUS
TOLERANCE INSTALLATION.


(RIGHT-HAND AND LEFT-HAND GATES REQUIRED; A LEFT-HAND GATE IS SHOWN.)

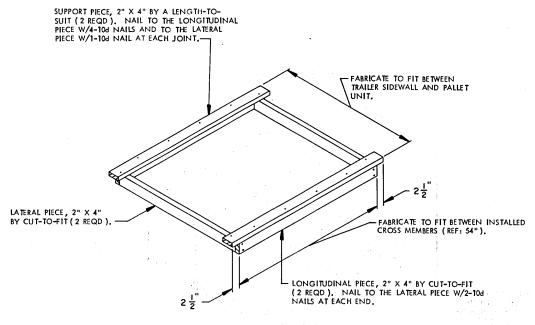

SPACER ASSEMBLY C

THIS ASSEMBLY IS DESIGNED FOR USE AS A LATERAL BRACING IN A TRAILER EQUIPPED WITH MECHANICAL BRACING DEVICES.

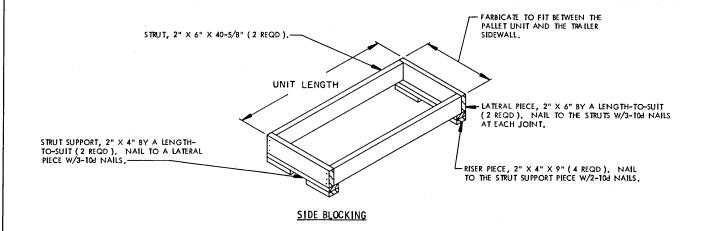

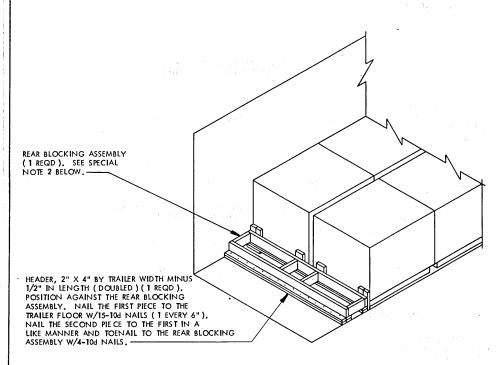

NAILED HEADER METHOD

SPECIAL NOTES:

- 1. THE NAILED-HEADER METHOD OF REAR BLOCKING DEPICTED ABOVE CAN ONLY BE USED IN TRAILERS HAVING A NAILABLE FLOOR AREA BETWEEN THE LADING AND THE METAL THRESHOLD, OR A THRESHOLD PLATE IF THE TRAILER IS SO EQUIPPED, OF AT LEAST FOURTEEN INCHES (14").
- 2. REAR BLOCKING ASSEMBLY "A" IS SHOWN FOR A TYPICAL INSTALLATION. CONSTRUCT THE ASSEMBLY USING 6" (MINIMUM) LONG STRUTS.
- 3. THE NAILED-HEADER METHOD OF REAR BLOCKING IS ADEQUATE FOR THE RETENTION OF THE MAXIMUM WEIGHT LOAD.
- 4. THE NAILED-HEADER METHOD, ALTHOUGH DESIGNED ESPECIALLY FOR TRAILERS HAVING ROLL-UP TYPE DOORS, MAY ALSO BE USED IN TRAILERS EQUIPPED WITH HINGED DOORS.

NAILED HEADER METHOD
PROCEDURES FOR CONVENTIONAL VAN TRAILERS EQUIPPED WITH ROLL-UP TYPE DOORS

TYGARD PATCH PIECE | None 2 at Right, | See Special Naled N

SPECIAL NOTES:

- THE TYGARD METHOD OF REAR BLOCKING DEPICTED, CAN ONLY, BE USED IN TRAILERS WHICH HAVE REASONABLY SMOOTH AND ADEQUATELY SECURED SIDE-WALL PANELS IN THE AREA WHERE THE TYGARD MATERIAL IS TO BE APPLIED. NOTE THAT TYGARD MATERIAL MUST BE INSTALLED AT TWO LEVELS ON THE REAR LOAD UNIT,
- 2. A 42" HIGH PLYWOOD GATE MUST BE INCTALLED AT THE REAR OF THE LOAD TO PROVIDE A SMOOTH SURFACE FOR THE TYGARD MATERIAL TO EXTEND AROUND. IF THE REAR LOAD UNIT IS 2-WIDE INSTALL A GATE WHICH IS TRAILER WIDTH MINUS 1/2" IN LENGTH AS SHOWN BY THE "TYGARD METHOD A" DETAIL AT LEFT. IF THE REAR LOAD UNIT IS 1-WIDE, ROTATE THE PALLET, INSTALL ONE (1) PALLET WIDTH GATE, AND ONE (1) TRAILER WIDTH MINUS 1/2" IN LENGTH GATE, AS SHOWN BY THE "TYGARD METHOD B" DETAIL BELOW.
- 3. THE TYGARD MATERIAL AND THE ADHESIVE FOR ATTACHING IT ARE COMMERCIAL PRODUCTS. FOR A SOURCE OF SUPPLY, CONTACT WALNUT INDUSTRIES, INC., 1344 ADAMS RAOD, PO BOX "E", BENSAIEM, PA 10920-0860, PHONE 1-800-523-6536. APPLICATION INSTRUCTIONS AND GUIDANCE CAN ALSO BE OBTAINED FROM THAT OFFICE.
- 4. THE TYGARD METHOD, ALTHOUGH ESPECIALLY FOR TRAILERS HAVING ROLL-UP TYPE DOORS, MAY ALSO BE USED IN TRAILERS EQUIPPED WITH HINGED DOORS.
- 5. NOTICE: IF THE AREA OF A SIDEWALL WHERE THE TY GARD SHOULD BE ATTACHED IS ROUGH AND/OR BROKEN, THE APPLICABLE PIECE (S) OF TYGARD CAN BE LENGTHENED A SUITABLE AMOUNT AND ATTACHED TO THE SIDEWALL AHEAD OF THE INDICATED PREFERRED LOCATION.

INDICATES TYGARD MATERIAL.
STAPLE TO THE LOAD BEARING
GATE TO PREVENT SAGGING.
AS AN ALTERNATIVE, A 1" X 4"
BY LOAD HEIGHT PIECE MAY BE
NAILED THRU THE THGARD MATERIAL
INTO THE LOAD BEARING GATE.
CAUTION: PLACE 1" X 4" SO AS TO
BE ALIGNED WITH THE VOID BETWEEN
THE ROWS OF PALLET UNITS.

RECOMMENDED EQUIPMENT/INSTALLATION PROCEDURES


TYGARD METHOD A

EQUIPMENT REQUIRED


PAINT ROLLER, LATEX
PAINT ROLLER PAN
TENSIONING ROD/TOOL
PRESSURE ROLLER
RATCHET WRENCH (12" TO 15" HANDLE)
OPEN END OR BOX WRENCH (12" TO 15" HANDLE)
SCISSORS OR KNIFE
TYGARD (15" WIDE ROLL)
TYGARD ADHESIVE

BASIC INSTALLATION GUIDANCE

- CUT TO LENGTH THE REQUIRED NUMBER OF TYGARD PIECES (FROM 2 TO 8
 DEPENDING UPON THE LOAD CONFIGURATION) FOR ATTACHMENT TO THE
 TRAILER SIDEWALL, PIECES WILL BE OF A LENGTH AS REQUIRED TO PROVIDE
 PROPER BONDING TO THE TRAILER SIDEWALL AND TO EXTEND 60" ACROSS
 THE REAR OF THE LOAD. ALSO, CUT 72" LONG "PATCH" PIECES OF TYGARD
 MATERIAL, ONE FOR EACH SET OF TWO PIECES PREVIOUSLY CUT.
- 2. PRIOR TO PISITIONING OF THE PALLETS IN THE REARMOST LOAD UNIT APPLY TYGARD ADHESIVE TO THE PROFER PORTIONS OF THE TRAILER SIDEWALLS AND TO THE CORD SIDE OF A CORRESPONDING LENGTH OF EACH OF THE TYGARD PIECES THAT ARE TO BE ATTACHED TO THE SIDEWALLS OF THE TRAILER. ALLOW TIME FOR THE ADHESIVE TO "CURE" BEFORE PLACING A STRIP OF TYGARD ONTO A SIDEWALL (ADHESIVE WILL FEEL ALMOST DRY WHEN TOUCHED). NOTE: APPLICATION OF TYGARD IS SIMILAR TO THE APPLICATION OF "FORMICA".
- 3. APPLY THE TYGARD PIECES TO EACH SIDEWALL OF THE TRAILER SO THAT THE PIECES ARE PARALLEL OR NEARLY PARALLEL TO THE FLOOR, ROLL THE TYGARD WITH THE PRESSURE ROLLER TO ENSURE PROPER BONDING IS ACHIEVED, TEMPORARILY SECURE THE LOOSE FNDS TO THE TRAILER SIDEWALL OR TO AN OPEN HINGED TYPE DOOR OR TO THE QUITSIDE WALL, AS APPLICABLE.
- 4. POSITION THE PALLETS OF THE REARMOST LOAD UNIT INTO THE TRAILER AND INSTALL ANTI-SWAY BRACES, IF APPLICABLE.
- 5. UNDO THE PREVIOUSLY SECURED LOOSE ENDS AND BRING A SET OF TWO PIECES TOGETHER ACROSS THE REAR OF THE LOAD. POSITION THE TENSIONING ROD SO THAT THE LOOSE ENDS OF THE TYGARD MATERIAL EXTEND THRU THE SLOT IN ROD USING THE TWO WRENCHES, ROLL UP THE TYGARD TO TENSION IT ACROSS REAR OF THE LOAD. POSITION A WRENCH SO AS TO MAINTAIN THE TENSION IN THE TYGARD PIECES. CUT OFF AND DISCARD EXCESS MATERIAL FROM ONE PIECE OF THE TYGARD.
- 6. APPLY TYGARD ADHESIVE TO THE TENSIONED TYGARD PIECES AND ALSO TO THE CORD SIDE OF THE PREVIOUSLY CUT "PATCH" PIECE. APPLY THE "PATCH" AND ROLL WITH THE PRESSURE ROLLER TO ENSURE PROPER BONDING.

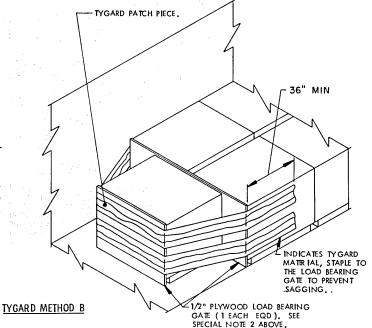


TYGARD METHOD
PROCEDURES FOR CONVENTIONAL VAN TRAILERS EQUIPPED WITH ROLL-UP TYPE DOORS

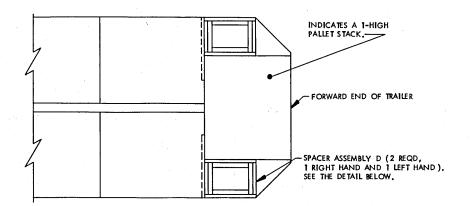

ALTERNATIVE FORWARD LOADING PATTERN

THIS PROCEDURE IS APPLICABLE TO THE LOADING OF ONE (1) PALLET UNIT IN THE FORWARD END OF A CONVENTIONAL VAN TRAILER HAVING LARGE ANGLED FRONT CORNERS (REF: 18"), THE PROCEDURES MAY ALSO BE USED IN TRAILERS HAVING SQUARE CORNERS, OR ROUNDED FRONT CORNERS, OR ANGLED CORNERS OF ANOTHER SIZE.

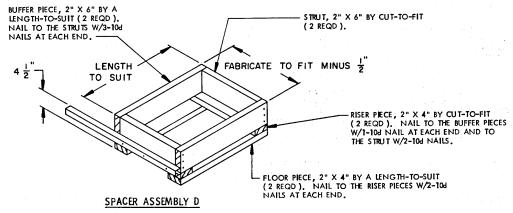

THIS ASSEMBLY IS DESIGNED FOR LATERAL BRACING OF A SINGLE PALLET UNIT WHICH IS TURNED 90° FROM THE NORMAL LOADING ORIENTATION AND POSITIONED IN THE FRONT OF AN ANGLED CORNER CONVENTIONAL VAN TRAILER AS SHOWN IN THE "ALTERNATIVE LOADING PATTERN" VIEW ABOVE, RIGHT HAND AND LEFT HAND SPACER ASSEMBLIES ARE REQUIRED,

PROCEDURES FOR CONVENTIONAL VAN TRAILERS EQUIPPED WITH LARGE-ANGLED FRONT CORNERS