APPROVED BY

APPROVED BY

BUREAU OF EXPLOSIVES

MATERIAL SERVICES

BUPERVISOR, MILITARY & MITERIMODAL SERVICES

DATE 1/4/80

# LOADING AND BRACING WITH WOODEN DUNNAGE IN COMMERCIAL CONTAINERS OF PALLETIZED UNITS OF 81MM BOXED AMMUNITION (36-BOX PALLET UNIT) (METAL BOX)

THE DEPICTED WOODEN DUNNAGE METHOD CAN BE APPLIED TO ANY COMMERCIAL INTERMODAL 20-FOOT CONTAINER, ALTHOUGH THE DUNNAGE DIMENSIONS HAVE BEEN GIVEN FOR A 92" WIDE BY 95" HIGH (INSIDE DIMENSIONS) CONTAINER. ALTHOUGH THE LOAD AS SHOWN IS BASED ON AN 8"-6" HIGH CONTAINER IS PREFERRED FOR SHIPPING THE DEPICTED LOAD, WHEN AN 8"-0" HIGH CONTAINER IS USED, THE HEIGHT OF SOME DUNNAGE ASSEMBLIES WILL HAVE TO BE LOWERED BY REMOVING SOME MATERIAL FROM THE TOP OR BOTTOM OF SOME OF THE VERTICAL PIECES.

LOADING AND BRACING SPECIFICATIONS AS DELINEATED HEREIN ARE ADEQUATE FOR SHIPMENTS TO BE MOVED BY ANY SURFACE MODE OF TRANSPORT ( MOTOR, RAIL, AND WATER ).


REQUIREMENTS CITED WITHIN THE BUREAU OF EXPLOSIVES PAMPHLET 6C APPLY WHEN THE SHIPMENT MOVES BY TRAILER/CONTAINER-ON-FLAT-CAR (T/COFC). SPECIAL T/COFC NOTES FOLLOW.


- A. A LOADED CONTAINER MUST BE ON A CHASSIS EQUIPPED WITH TWO BOGIE ASSEMBLIES WHEN BEING MOVED IN TOFC SERVICE.
- B. THE LOAD LIMIT OF A T/COFC RAIL CAR MUST NOT BE EXCEEDED, NOR WILL A CAR BE LOADED SO THAT THE TRUCK UNDER ONE END OF THE CAR CARRIES MORE THAN ONE-HALF OF THE LOAD LIMIT FOR THAT CAR.

DURING INTRASTATE AND/OR INTERSTATE MOVES BY MOTOR CARRIER, A PROPER CHASSIS/MODIFIED FLAT BED TRAILER MUST BE USED TO PRECLUDE VIOLATION OF ONE OR MORE "WEIGHT LAWS" APPLICABLE TO THE STATE OR STATES INVOLVED.

REVISIONS		WRF/LLW
	/	RSH6/ Lewillis
H - V		Darvel C. Felley
		APPROVED BY ORDER OF COMMANDING GENERAL, U. S. ARMY MATERIEL DEVELOPMENT AND READINGS COMMAND (DARCOM)
		U.S. ARMY DEFENSE AMMUNITION CEPTER AND SCHOOL
		U. S. ARMY DARCOM DRAWING
	1	MARCH 1980
		DEF AMMO CEN & SCH DWG NO.
		D-SARAC-4432

DO NOT SCALE

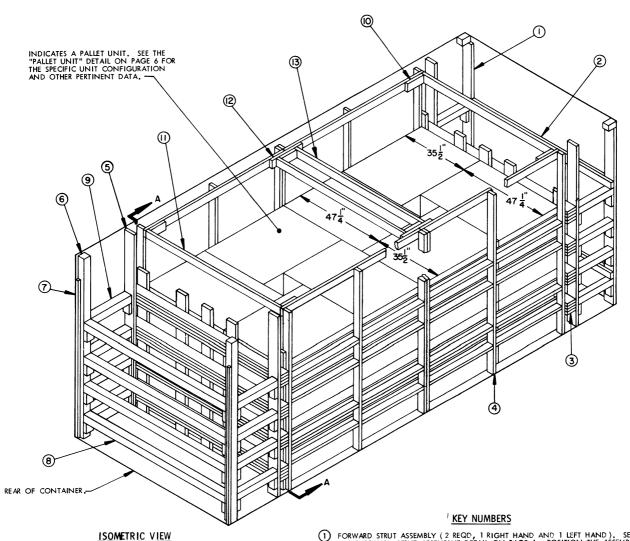

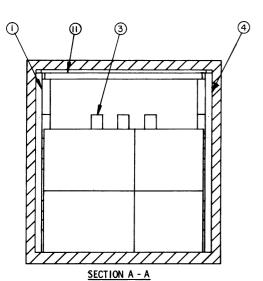

- FORWARD STRUT ASSEMBLY (2 REQD, 1 RIGHT HAND AND 1 LEFT HAND). SEE THE "FORWARD STRUT ASSEMBLY" DETAIL ON PAGE 4. POSITION THE ASSEMBLY WITH THE 4" X 4" STRUTS AGAINST THE CONTAINER SIDEWALL, AS SHOWN ABOVE. AFTER PIECE MARKED (3) IS INSTALLED AND CENTERED ON THE WIDTH OF THE CONTAINER, NAIL THROUGH THE REAR BUFFER PIECE OF EACH FORWARD STRUT ASSEMBLY INTO EACH BEAM ASSEMBLY OF PIECE MARKED (3) W/2-124 NAILS AT EACH JOINT.
- 2) SPREADER ASSEMBLY (2 REQD). SEE THE "SPREADER ASSEMBLY" DETAIL ON PAGE 6. POSITION AS SHOWN, IMMEDIATELY ABOVE THE TOP AND BOTTOM STRUTS AND NAIL TO THE FORWARD STRUT ASSEMBLY W/2-10d NAILS AT EACH JOINT.
- (3) FORWARD BLOCKING ASSEMBLY ( 1 REQD ). SEE THE "FORWARD BLOCKING ASSEMBLY" DETAIL ON PAGE 4 AND GENERAL NOTE "F" ON PAGE 3.
- (4) SIDE FILL ASSEMBLY (4 REQD). SEE THE "SIDE FILL ASSEMBLY" DETAIL ON PAGE 5 AND GENERAL NOTE "D" ON PAGE 3.
- (5) REAR BLOCKING ASSEMBLY ( 1 REQD ). SEE THE "REAR BLOCKING ASSEMBLY" DETAIL ON PAGE 5 AND GENERAL NOTE "F" ON PAGE 3.
- $\ensuremath{ \bullet}$  door post vertical ( 2 reqd ). See the "door post vertical" detail and "detail a" on page 7.
- (7) DOOR POST VERTICAL RETAINER (2 REQD), SEE THE "DOOR POST VERTICAL RETAINER" DETAILS ON PAGE 8 AND "DETAIL A" ON PAGE 7. NAIL TO THE DOOR POST VERTICAL W/4-10d NAILS.
- (8) DOOR SPANNER, 4" X 4" MATERIAL, CUT TO A LENGTH THAT WILL PROVIDE FOR A DRIVE FIT (REF. 7'-1-3/8") (4 REQD). TOENAIL TO THE 4" X 4" DOOR POST VERTICAL PIECES W.2-124 NAILS AT EACH END. SEE THE "BEVEL QUT" DETAIL ON PAGE 7. AFTER INSTALLING THE BOTTOM AND TOP DOOR SPANNERS, THE STRUTS, PIECES MARKED (9) ARE TO BE INSTALLED.
- (9) STRUT, 4" X 4" BY CUT-TO-FIT ( 8 REQD ). TOENAIL TO THE BUFFER PIECES OF THE REAR BLOCKING ASSEMBLY AND THE DOOR POST VERTICAL W/2-12d NAILS AT EACH END. SEE THE "BEVEL CUT" DETAIL ON PAGE 7.
- (B) SPANNER PIECE CLEAT, 2"  $\times$  4"  $\times$  9" (6 REQD ). LOCATE NEAR THE END OF A TIE PIECE AND NAIL TO THE TIE PIECE W/3-8d NAILS.
- (1) SPANNER PIECE, 2" X 4" MATERIAL, CUT TO A LENGTH THAT WILL PROVIDE FOR A TIGHT FIT (REF: 6'-10") (2 REQD). TOENAIL TO THE SIDE FILL ASSEMBLIES W/2-10d NAILS AT EACH END.
- (12) SPLICE FOR TIE PIECES, 2" X 4" X 18"( 2 REQD ). NAIL TO TWO LONGITUDINALLY ADJACENT TIE PIECES OF THE SIDE FILL ASSEMBLIES W/3-104 NAILS AT EACH END.
- (3) SPANNER PIECE, 2" X 4" MATERIAL, CUT TO A LENGTH THAT WILL PROVIDE FOR A TIGHT FIT (REF: 6'-7") (2 REQD). TOENAIL TO THE SPLICE FOR TIE PIECES W/2-12d NAILS AT EACH END.

## ( GENERAL NOTES CONTINUED )

- L. RECOMMENDED SEQUENTIAL LOADING PROCEDURES:
  - PREFABRICATE ONE RIGHT HAND AND ONE LEFT HAND FORWARD STRUT ASSEMBLY, TWO SPREADER ASSEMBLIES, ONE FORWARD BLOCKING ASSEMBLY, FOUR SIDE FILL ASSEMBLIES, ONE REAR BLOCKING ASSEMBLY, AND NAIL A DOOR POST VERTICAL RETAINER TO EACH DOOR POST VERTICAL, ONE RIGHT HAND AND ONE LEFT HAND.
  - 2. INSTALL THE TWO FORWARD STRUT ASSEMBLIES ( ONE RIGHT HAND AND ONE LEFT HAND ) AND TWO SPREADER ASSEMBLIES.
  - 3. INSTALL FORWARD BLOCKING ASSEMBLY.
  - 4. INSTALL ONE SIDE FILL ASSEMBLY AND LOAD TWO PALLET UNITS.
  - 5. REPEAT STEP 4.
  - 6. LOAD FOUR PALLET UNITS.
  - 7. REPEAT STEP 4.
  - 8. REPEAT STEP 4.
  - 9. REPEAT STEP 6.
  - 10. INSTALL REAR BLOCKING ASSEMBLY.
  - INSTALL THE TWO DOOR POST VERTICAL ASSEMBLIES (ONE RIGHT HAND AND ONE LEFT HAND).
  - 12. INSTALL TWO DOOR SPANNER PIECES (ONE AT THE LOWEST POSITION AND ONE AT THE UPPERMOST POSITION ).
  - INSTALL THE STRUTS BETWEEN THE REAR BLOCKING ASSEMBLY AND DOOR POST VERTICAL.
  - 14. INSTALL THE TWO SPLICE PIECES FOR THE TIE PIECES, THE SIX SPANNER PIECE CLEATS, AND THE FOUR SPANNER PIECES. SEE "\*\* NOTE BELOW.
  - 15. INSTALL THE REMAINING TWO DOOR SPANNER PIECES.
  - # IF DESIRED, PIECES MARKED (4) AND (10) THRU (3) MAY BE INSTALLED PRIOR TO LOADING A CONTAINER.

BILL OF MATERIAL				
LUMBER	LINEAR FEET	BOARD FEET		
1" X 6" 2" X 4" 2" X 6" 4" X 4"	1 10 309 350 73	55 206 350 98		
NAILS	NO. REQD	POUNDS		
6d (2") 8d (2-1/2") 10d (3") 12d (3-1/4")	272 18 722 72	1-3/4 1/4 11-1/4 1-1/4		
DOOR POST VERTI	L.,	2 REQD 64 L		

#### GENERAL NOTES

- A. THIS DOCUMENT HAS BEEN PREPARED AND ISSUED IN ACCORDANCE WITH AR 740-1 AND AUGMENTS TM 743-200-1 ( CHAPTER 5 ).
- B. THE SPECIFIED OUTLOADING PROCEDURE IS APPLICABLE TO A LOAD OF 36-BOX PALLET UNITS OF BIMM AMMUNITION PACKED IN METAL BOXES. SUBSEQUENT REFERENCE TO PALLET UNIT MEANS THE PALLET UNIT WITH AMMUNITION ITEMS. SEE PAGE 6 FOR THE DETAIL OF THE PALLET UNIT. CAUTION: REGARDLESS OF THE QUANTITY OF UNITS TO BE SHIPPED, THE "MAXIMUM GROSS" WEIGHT" OF 44,800 POUNDS MUST NOT BE EXCEEDED.
- C. THE LOAD AS SHOWN IS BASED ON A 4,700 POUND 20' LONG BY 8' WIDE BY 8'-6" HIGH INTERMODAL COMMERCIAL CONTAINER WITH INSIDE DIMENSIONS OF 19'-4" LONG BY 92" WIDE BY 95" HIGH. THE LOAD IS DESIGNED FOR TRAILER/CONTAINER-ON-FLAT CAR (T/COFC) SHIPMENT, HOWEVER, THE LOAD AS DESIGNED CAN ALSO BE MOVED BY OTHER SURFACE MODES OF TRANSPORT. NOTICE: OTHER CONTAINERS OF THE SAME DESIGN CONFIGURATION CAN BE USED.
- D. WHEN LOADING PALLET UNITS, THEY ARE TO BE POSITIONED SO AS TO ACHIEVE A TIGHT LOAD (TIGHT AGAINST THE FORWARD AND SIDE DUNNAGE ASSEMBLIES). ALTHOUGH A TOTAL OF ONE AND ONE-HALF INCHES (1-1/2") OF UNBLOCKED SPACE ACROSS THE WIDTH OF A LOAD BAY IS PERMITTED, LATERAL VOIDS WITHIN THE LOAD ARE TO BE HELD TO A MINIMUM, EXCESSIVE SLACK CAN BE ELIMINATED FROM A LOAD BY LAMINATING ADDITIONAL PIECES OF APPROPRIATE THICKNESS TO THE BEARING PIECES ON THE SIDE FILL ASSEMBLIES ON ONE OR BOTH SIDES OF THE CONTAINER, NAIL EACH ADDITIONAL PIECE TO THE BEARING PIECE W/I APPROPRIATELY SIZED NAIL EVERY 12". ADDITIONALLY, THE NUMBER AND THICKNESS OF THE BEARING AND VERTICAL PIECES MAY BE ADJUSTED AS REQUIRED TO FACILITATE VARIANCE IN PALLET UNIT SIZE.
- E. DUNNAGE LUMBER SPECIFIED IS OF A NOMINAL SIZE. FOR EXAMPLE, 1" X 6" MATERIAL IS ACTUALLY 3/4" THICK BY 5-1/2" WIDE AND 2" X 6" MATERIAL IS ACTUALLY 1-1/2" THICK BY 5-1/2" WIDE.
- F. A STAGGERED NAILING PATTERN WILL BE USED WHEREVER POSSIBLE WHEN NAILS ARE DRIVEN INTO JOINTS OF DUNNAGE ASSEMBLIES OR WHEN LAMINATING DUNNAGE, ADDITIONALLY, THE NAILING PATTERN FOR AN UPPER PIECE OF LAMINATED DUNNAGE WILL BE ADJUSTED AS REQUIRED SO THAT A NAIL FOR THAT PIECE WILL NOT BE DRIVEN THROUGH ONTO OR RIGHT BESIDE A NAIL IN A LOWER PIECE.
- G. IN SOME CONTAINERS, SUCH AS SOME ALL STEEL CONTAINERS, THERE IS A SLOT AT THE CORNERS OF THE FORWARD WALL. A PIECE OF DUNNAGE MATERIAL MUST BE LAMINATED TO THE BUFFER PIECES ON THE FORWARD BLOCKING ASSEMBLY TO PROVIDE A FLAT SURFACE FOR THE 2" X 6" BUFFER PIECES. A PIECE OF 2" X 4", 2" X 3", OR A SPECIAL WIDTH PIECE QUT-TO-FIT CAN BE USED. THIS FILL PIECE WILL BE NAILED WITH ONE APPROPRIATELY SIZED NAIL EVERY 12". THIS PIECE IS NOT REQUIRED WHEN THE FRONT WALL OF THE CONTAINER IS SMOOTH AND FLAT.
- H. CAUTION: DO NOT NAIL DUNNAGE MATERIAL TO THE CONTAINER WALLS OR FLOOR, ALL NAILING WILL BE WITHIN THE DUNNAGE.
- J. PORTIONS OF THE CONTAINERS DEPICTED WITHIN THIS DRAWING, SUCH AS ONE OF THE SIDE WALLS, HAVE NOT BEEN SHOWN IN THE LOAD VIEWS FOR CLARITY PURPOSES.
- K. TO MAKE LOADING EASIER, TO HELP ACHIEVE A TIGHT LOAD ACROSS A CONTAINER, AND TO PREVENT UNACCEPTABLE DAMAGE TO LADING UNITS WHEN LOADING A CONTAINER, A SLIP-SHEET WILL PROVIDE A SMOOTH SURFACE THAT WILL PREVENT UNIT STRAPS AND/OR BOXES FROM INTERLOCKING OR CATCHING ON OTHER PROJECTIONS WHEN LATERALLY ADJACENT LADING UNITS ARE BEING LOADED. A SLIP-SHEET WILB BUSED AFTER ONE-HALF OF A STACK IS LOADED WITH ONE OF ITS SIDES IN TIGHT CONTACT AT ONE SIDE OF THE CONTAINER. THE SLIP-SHEET IS TO BE PLACED AGAINST THE OTHER SIDE OF THE HALF-STACK BEFORE THE LAT HALF OF THE STACK IS LOADED. AFTER A STACK IS COMPLETED, THE SLIP-SHEET IS TO BE REMOVED FOR SUBSEQUENT USE WITH THE NEXT STACK. A SLIP-SHEET OF SUITABLE SIZE CAN BE MADE FROM A SHEET OF 1/8" TEMPERED HARDBOARD (MASONITE) OR FROM A SHEET OF ANY OTHER MATERIAL THAT WILL SATISFY THE REQUIREMENT.

( CONTINUED AT LEFT )

## LOAD AS SHOWN


ITEM	QUANTITY	WEIGHT ( APPROX )
DUNNAGE	T 16	1,497 LBS
-	TOTAL GROSS WEIGHT	37, 861 LBS

MATERIAL SPECIFICATIONS

LUMBER ----: TM 743-200-1 ( DUNNAGE LUMBER ) AND FED SPEC MM-L-751.


NAILS -----: FED SPEC FF-N-105; COMMON.

STEEL, STRUCTURAL ---: FED SPEC QQ-S-741; SQUARE STRUCTURAL TUBING AND ROLLED PLATE.

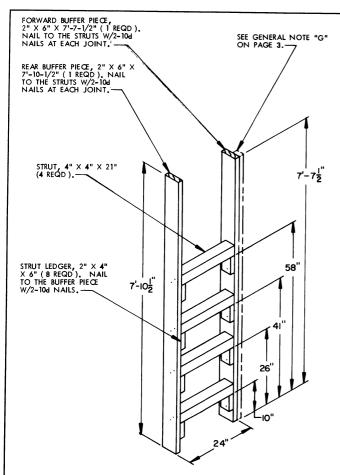



## FORWARD STRUT ASSEMBLY


A "RIGHT HAND" FORWARD STRUT ASSEMBLY IS DEPICTED. A "LEFT HAND" ASSEMBLY IS ALSO REQUIRED AND WILL BE THE SAME AS THE ASSEMBLY DEPICTED ABOVE, EXCEPT THE 4" X 4" STRUTS AND STRUT LEDGERS ARE ALIGNED ON THE OPPOSITE SIDE OF THE BUFFER PIECES.

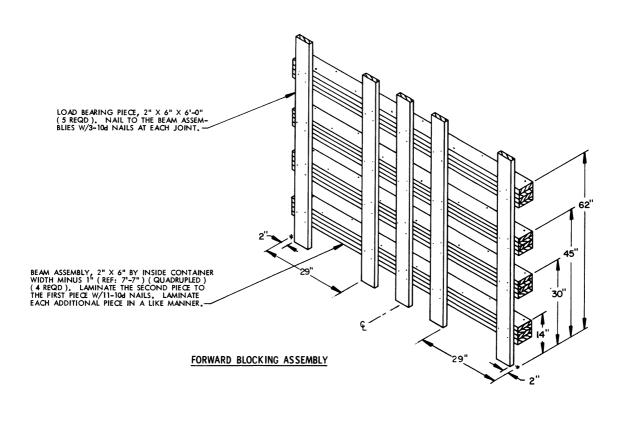


PAGE 4

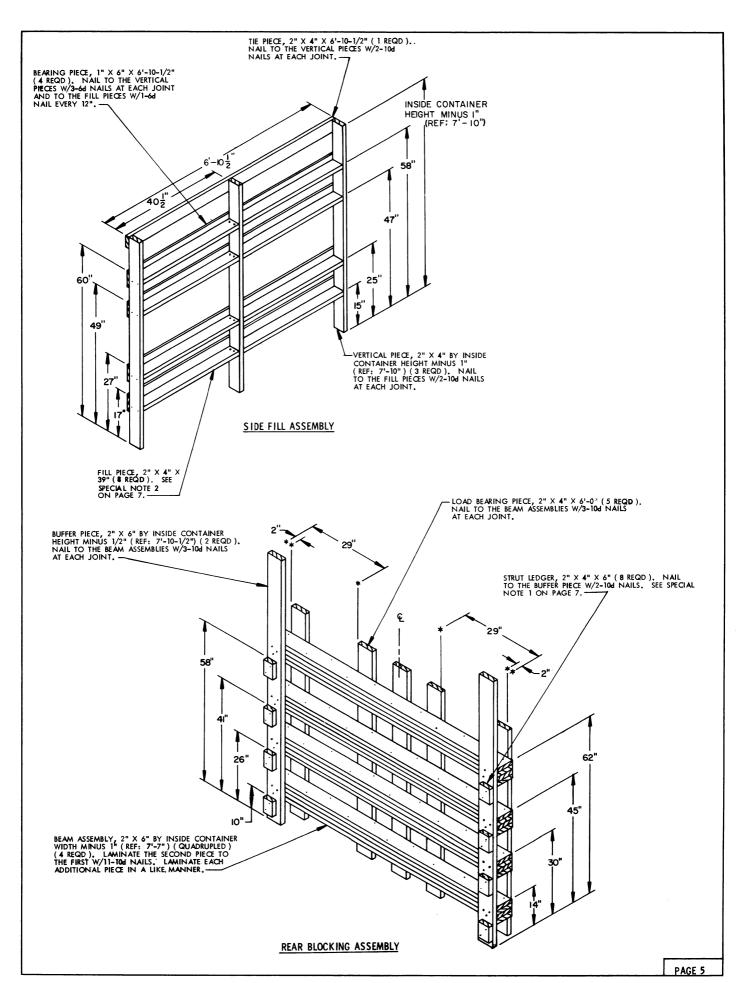

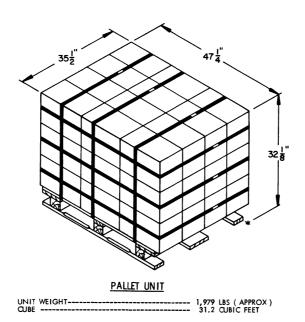


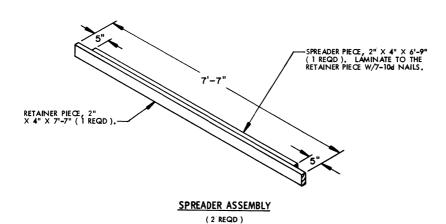

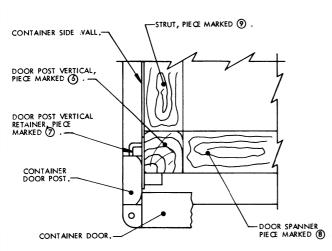

DETAIL A

A PARTIAL PLAN VIEW OF THE LEFT REAR PORTION OF THE CONTAINER IS SHOWN DEPICTING THE PROPER POSITION OF THE DOOR POST VERTICAL AND ADJACENT DUNNAGE PIECES.

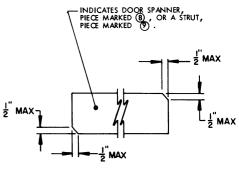


BEVEL-CUT


IF DESIRED, EACH END OF A DOOR SPANNER PIECE OR A STRUT MAY BE BEVEL-OUT AS SHOWN ABOVE TO FACILITATE THE ACHIEVEMENT OF A TIGHT DOOR-POST-TO-DOOR-POST FIT OR A TIGHT REAR-OF-LOAD FIT.


## SPECIAL NOTES:

- THE STRUT LEDGERS CAN ONLY BE PRE-NAILED TO THE DOOR POST VERTICAL ON ONE SIDE OF THE CONTAINER FOR THE DOOR SPANNER PIECES, ALSO THE STRUT LEDGERS FOR THE STRUTS CAN ONLY BE PRE-NAILED TO THE REAR BLOCKING AS-SEMBLY OR THE DOOR POST VERTICAL AT THE LOWEST DIMENSION.
- ONE END OF FOUR OF THE FILL PIECES MUST BE TOENAILED INTO THE CENTER VERTICAL PIECE W/2-10d NAILS AT EACH JOINT AS SHOWN.

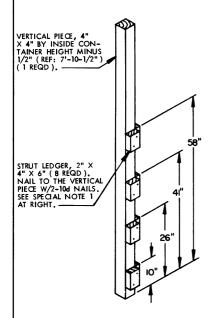

DOOR POST VERTICAL

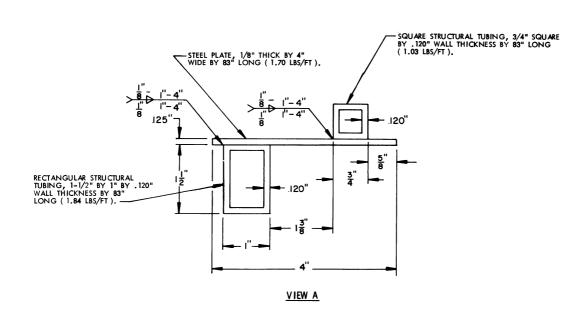

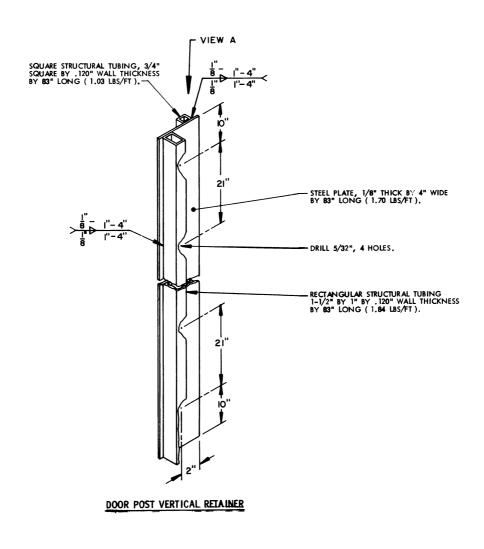

PAGE 8